


**1. MARK DOOR**

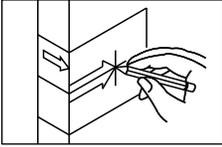


a. Position the horizontal center line of the template at the height of 36" (914mm) or 38" (965mm) from the finished floor, fold template on the corner of the door and mark the center of the dummy lever on the door edge.

b. Select 2 3/8" (60mm) or 2 3/4" (70mm) backset as desired and mark center of the dummy lever on the face of the door.

c. Mark the dummy lever mounting holes on the door for the appropriate type of dummy lever installation using the template below or the dummy lever as a template. Ensure lever is centered on the marked center.

**2. INSTALL DUMMY LEVER**

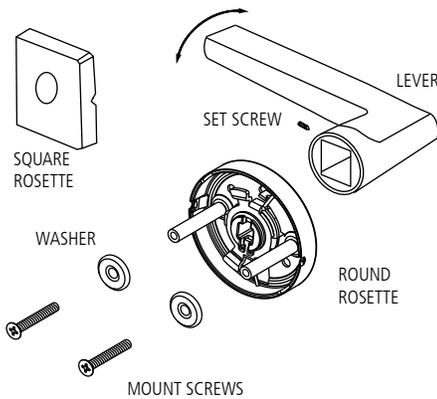


**ACTIVE DUMMY LEVER**

- a. Drill two 5/16" (8 mm) holes through the door as shown on the template.
- b. Insert the studs of dummy lever body into the drilled holes.
- c. Thread mounting screws through the washers and then insert them into the holes as illustrated. Tighten firmly.

**⚠ Use power tools with care.** Excessive tightening may damage hardware or impair operation.

d. Verify lever operation.

**TEMPLATE**

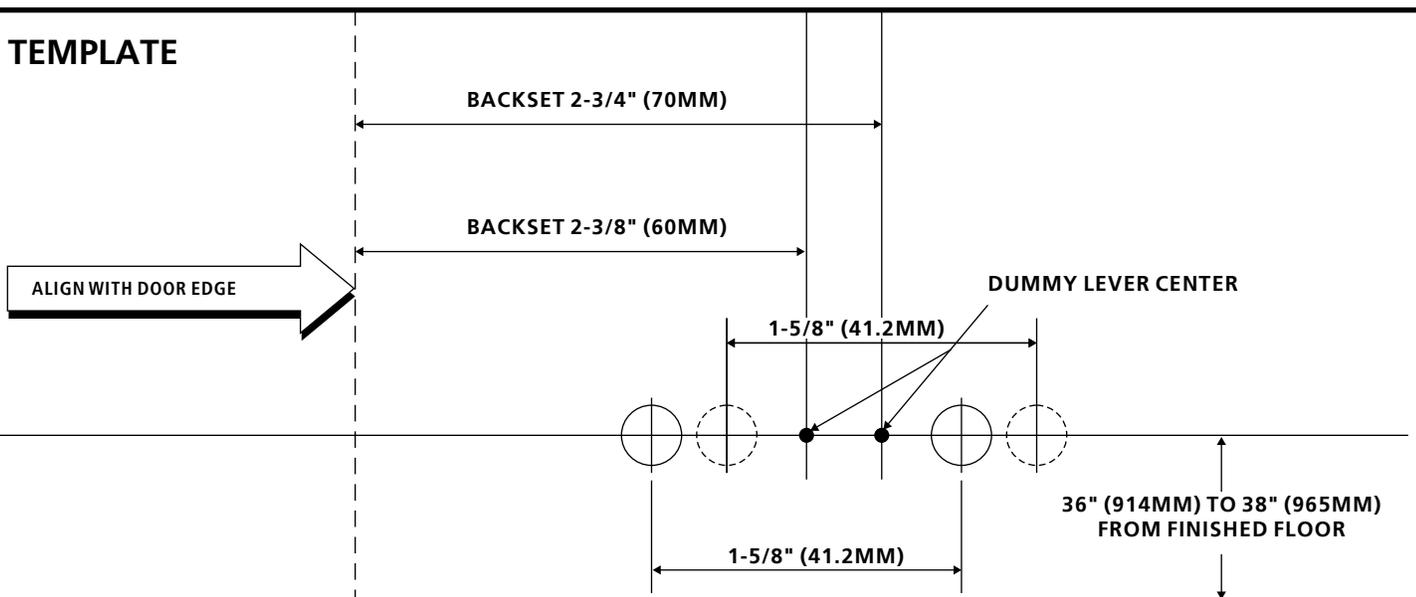

**⚠ CAUTION:** Prior to using template, verify that the template is to full scale by measuring any one of the backset dimensions.