



**INSIDE DOOR SURFACE**

**FOR DOOR EDGE AND OUTSIDE DOOR SURFACE PREPARATION REFER TO MORTISE EXIT DEVICE AND ESCUTCHEON TRIM INSTALLATION TEMPLATE**

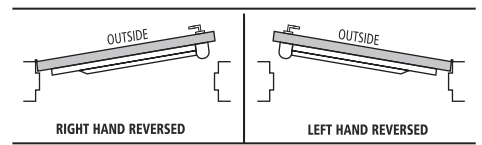


HANDING

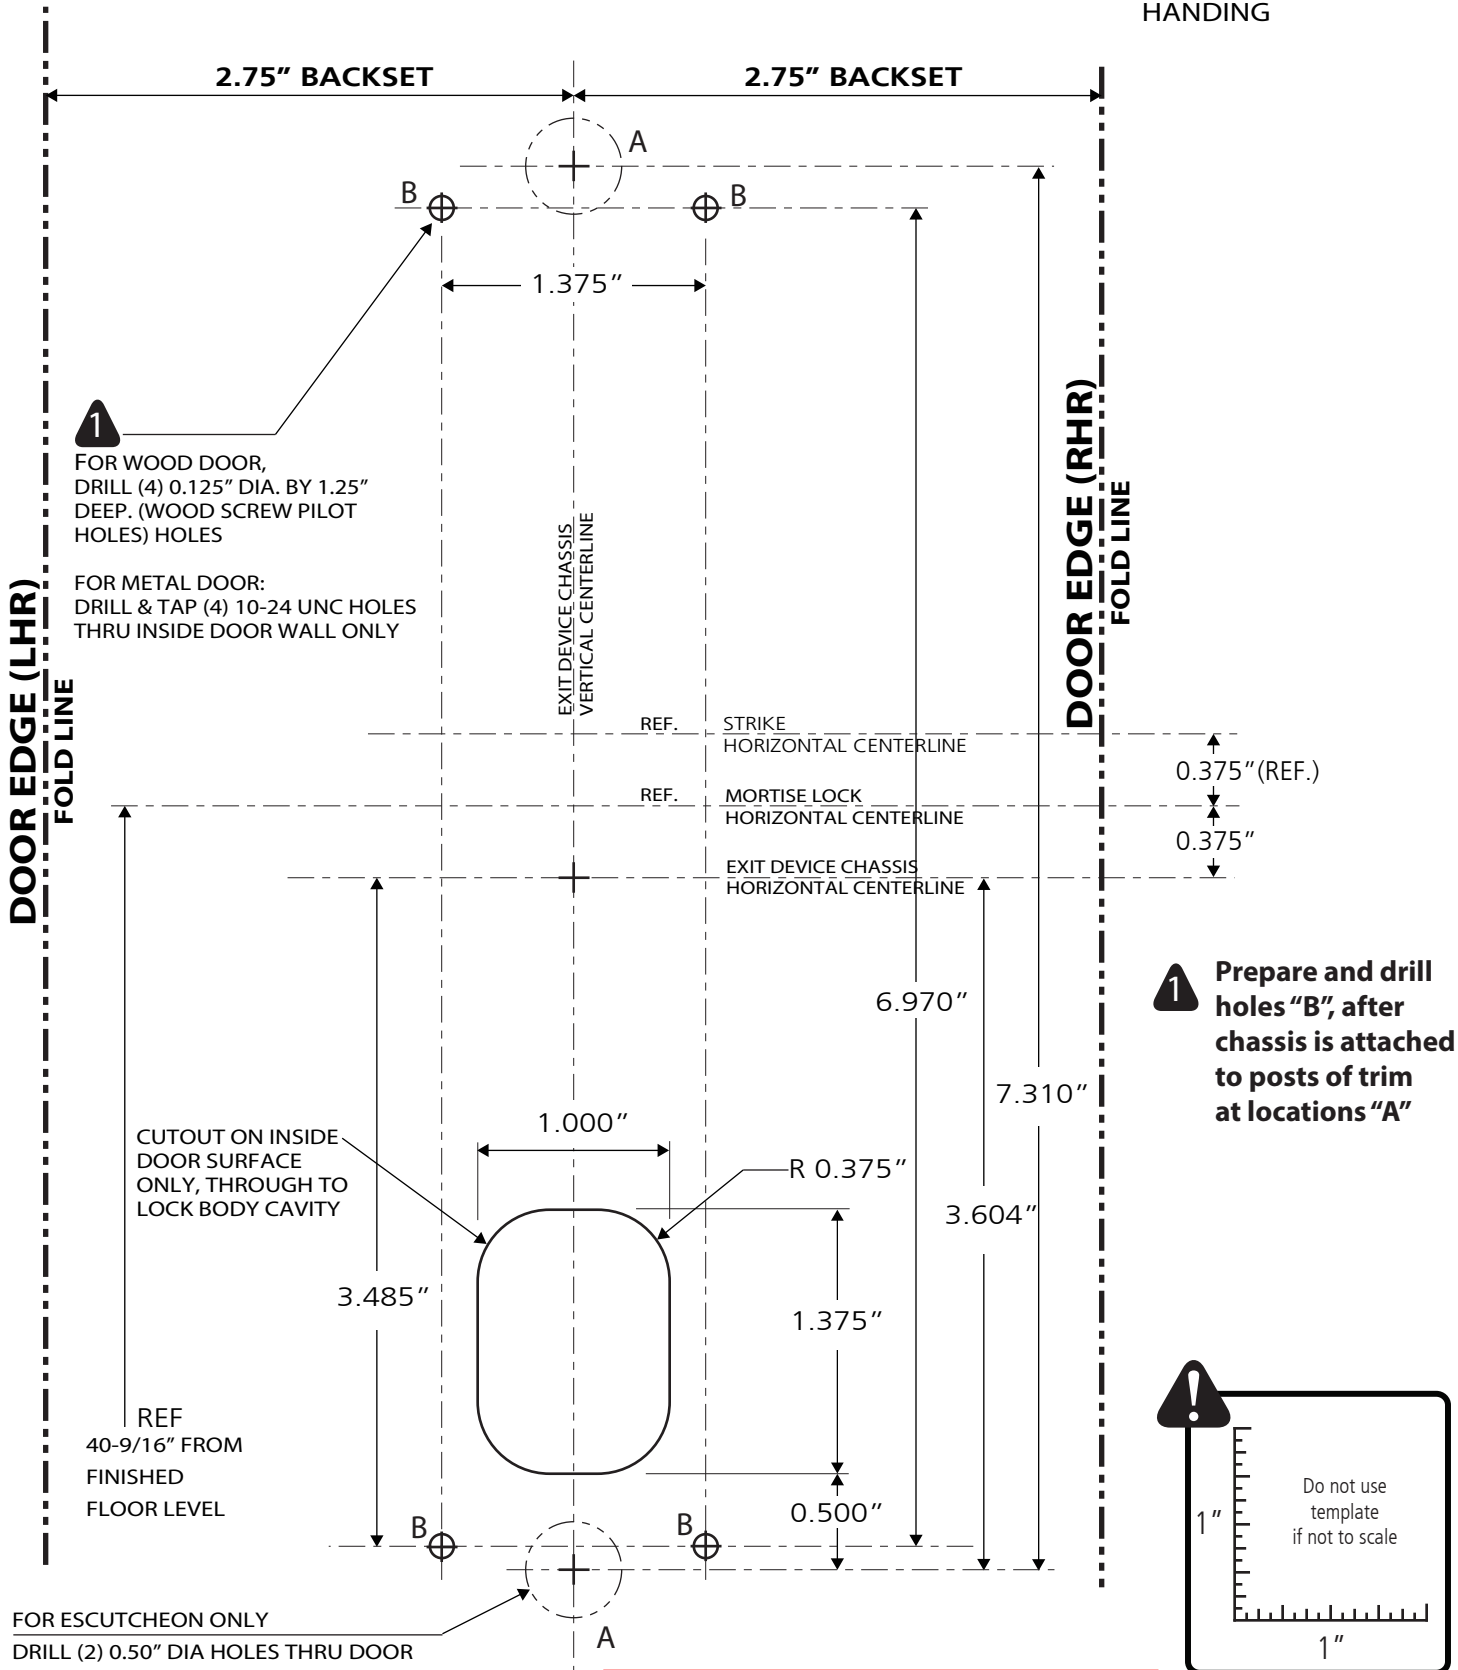

**1**  
FOR WOOD DOOR,  
DRILL (4) 0.125" DIA. BY 1.25"  
DEEP. (WOOD SCREW PILOT  
HOLES) HOLES

FOR METAL DOOR:  
DRILL & TAP (4) 10-24 UNC HOLES  
THRU INSIDE DOOR WALL ONLY

**1** Prepare and drill  
holes "B", after  
chassis is attached  
to posts of trim  
at locations "A"

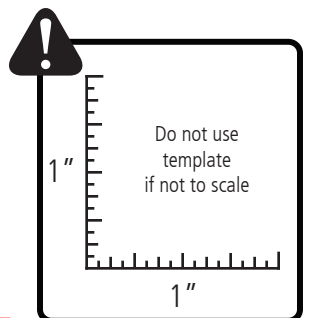

Document provided as-is, manufacturer reserves the right to make technical changes without prior notice.

FOR ESCUTCHEON ONLY  
DRILL (2) 0.50" DIA HOLES THRU DOOR