

9500TEM MORTISE LOCK EXIT DEVICE **ESCUTCHEON TRIM INSTALLATION INSTRUCTIONS**

1. MORTISE LOCK ESCUTCHEON TRIM INSTALLATION INSTRUCTIONS

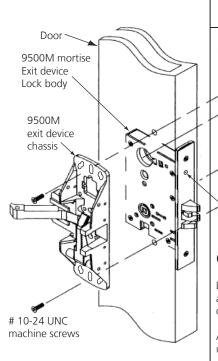

9500TEM70

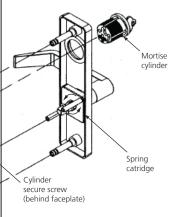

CLASSROOM (ENTRANCE)


Lockable escutcheon trim lever, key locks and unlocks lever. Lever operation unlatches

Attach exit device chassis to trim escutcheon posts using supplied machine screws (2).

Attach exit device chassis to door as per installation instructions supplied with mortise exit device

Install the mortise cylinder into the escutcheon plate and thread into lock body. Ensure cylinder operation (locks and unlocks the trim lever), and the lever rotation retracts the mortise lock latch. Secure the mortise cylinder with screw (behind faceplate).

9500TEM80

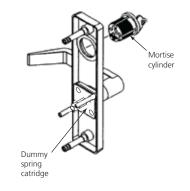

STORFROOM


Fixed trim lever, key retracts the mortise latch.

Attach exit device chassis to trim escutcheon posts using supplied machine screws (2).

Attach exit device chassis to door as per installation instructions supplied with mortise exit device.

Install the mortise cylinder in the escutcheon plate and thread into lock body. Ensure cylinder operation retracts mortise lock latch. Secure the mortise cylinder with screw (behind faceplate).

9500TEM10



PASSAGE

No cylinder, escutcheon trim lever always retracts mortise latch.

Attach exit device chassis to trim escutcheon posts using supplied machine screws (2).

Attach exit device chassis to door as per installation instructions supplied with mortise exit device.

Ensure the lever rotation retracts the mortise lock latch.

Notes:

- 1. Mortise lock supplied with mortise exit device
- 2. To prepare the door, use template supplied with mortise exit device
- 3. Verify function and mortise exit device operation, install lock body faceplate and ensure all mounting screws are properly tightened as per mortise exit device installation instructions
- 4. If required to change trim handing, follow instructions in Section 2, on sheet 2





9500TEM MORTISE LOCK EXIT DEVICE **ESCUTCHEON TRIM INSTALLATION INSTRUCTIONS**


2. MORTISE LOCK ESCUTCHEON TRIM ASSEMBLY & HANDING INSTRUCTIONS

A. ASSEMBLY & HANDING INSTRUCTIONS OF 9500TEM70 & 9500TEM10





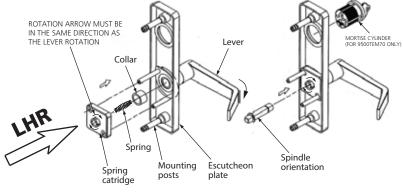

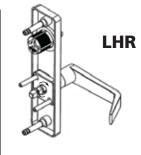


4. LEVER MUST BE AT HORIZONTAL LEVEL


- 2. ROTATE LEVER TO DESIRED HAND, INSERT COLLAR, SPRING, SPRING CATRIDGE AND SPINDLE IN ESCUTCHEON PLATE
- 3. INSTALL MORTISE CYLINDER (IF APPLICABLE) BEFORE THE TRIM IS ATTACHED TO DOOR







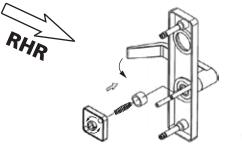


B. ASSEMBLY & HANDING INSTRUCTIONS OF 9500TEM80





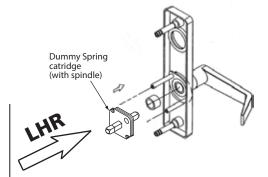

2. ROTATE LEVER TO DESIRED HAND, INSERT COLLAR, SPRING CATRIDGE IN ESCUTCHEON PLATE

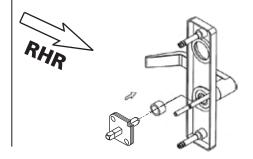



- 3. INSTALL MORTISE CYLINDER BEFORE THE TRIM IS ATTACHED TO DOOR
- 4. LEVER MUST BE AT HORIZONTAL LEVEL

