



31-4060 BI-FOLD HARDWARE - INSTALLATION INSTRUCTIONS


- For 2 door panels (bi-folding door assembly)
1 3/8 - 1 3/4" (35 - 45mm) thick
- Load capacity: Maximum 60 kg (132lbs) per bi-folding door
- Tracks must be installed on a level surface or ceiling
- Tracks are pre-drilled approximately every 300 mm (12")
- Required: 1/2" flat wrench, drill and metal saw

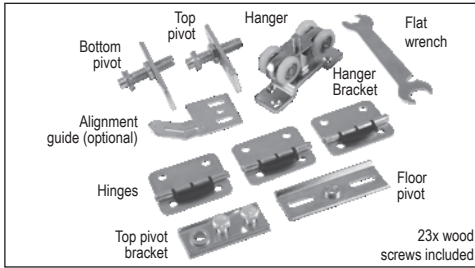


- Tracks must be installed and secured onto wood stud or header suitable for door weight.
- Use appropriate mounting screws for track installation.
- Door must be properly sized for the opening.

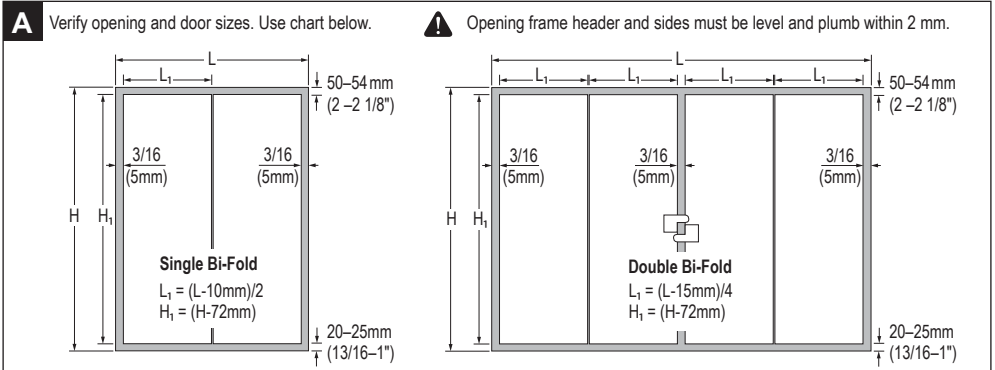


- B** Cut track to required length, (1/8" less than total opening) then insert top pivot and hanger (do not tighten top pivot) and install track.

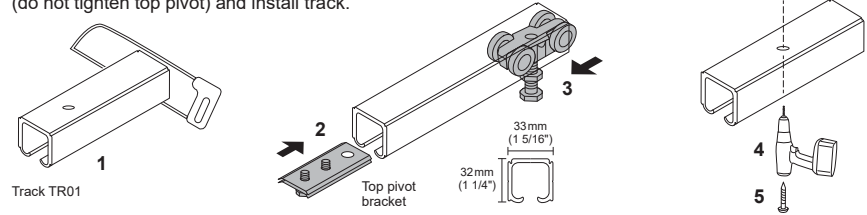


- C** Pre-drill holes and fix hinges on back of panel. Must use flat head screws

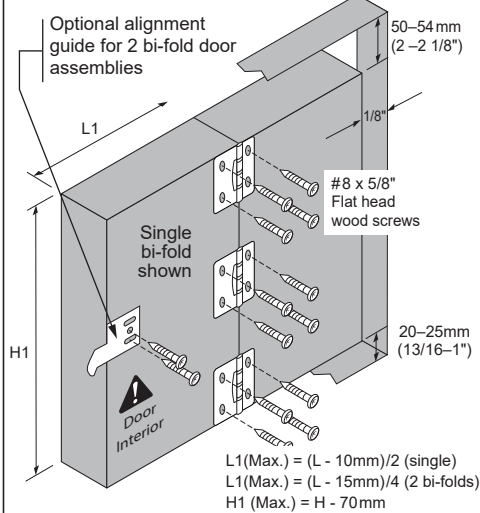


- D** Drill holes in the panel for the top and bottom pivot bolts at center of door thickness

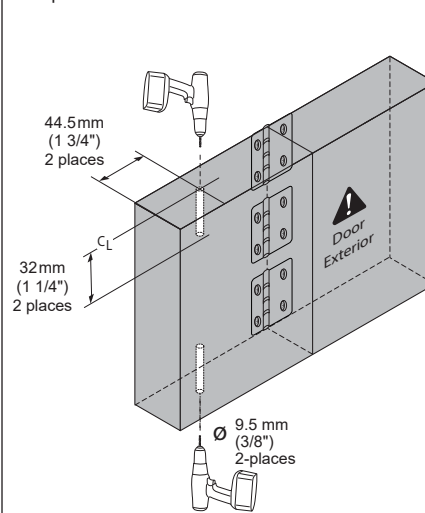


- E** Mount pivot plate to top and bottom of panel and install the hanger bracket on to door top at center of door thickness.

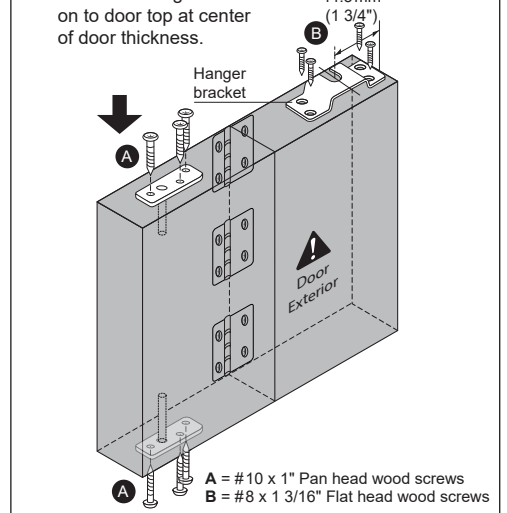


- F**
- 1- Install floor pivot on finished floor and track pivot bracket onto track
 - 2- Thread the pivot bolts into pivot plates (top & bottom)
 - 3- Insert the bottom pivot into floor pivot plate
 - 4- Mount onto hanger

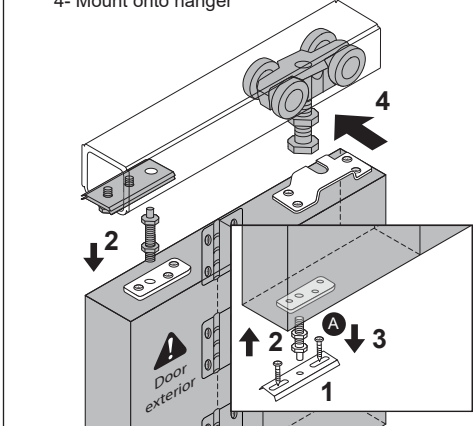

- G**
- 1- Adjust the top pivot bolt to engage with the track pivot plate, adjust the height of bottom pivot (if required), adjust the hanger bolt to level the door panels

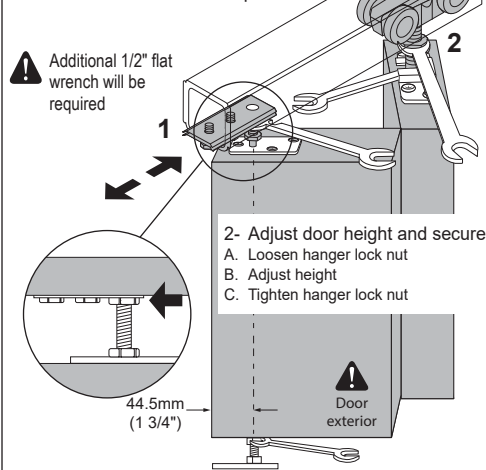

- H** Tighten lock nuts to secure pivot and hanger bolts adjustments

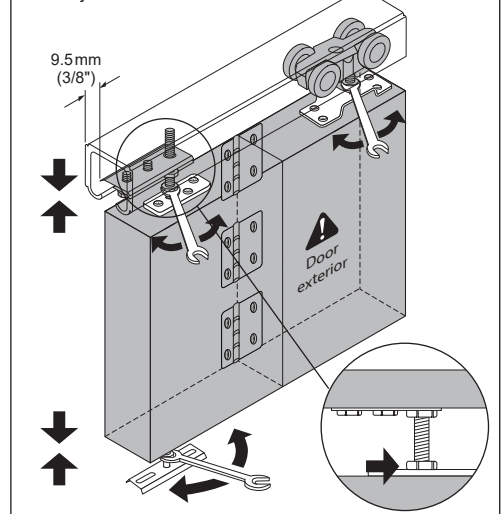

31-4060 QUINCAILLERIE POUR PORTES PLIANTES - INSTRUCTIONS D'INSTALLATION

- Pour deux panneaux de porte pliante 1 3/8" - 1 3/4" (35 - 45 mm) d'épaisseur
- Capacité : Maximum 60kg (132lbs) par porte pliante
- Les rails doivent être installés sur une surface ou plafond de niveau
- Les rails sont pré-perçés environ à tous les 300 mm (12")
- Requis : Clé de taille 1/2", perceuse et scie à métal

- Les rails doivent être fixés et sécurisés à la charpente de bois et convenir au poids de la porte.
- Utilisez les vis appropriées pour le type d'installation.
- Les portes doivent être correctement préparées.

