



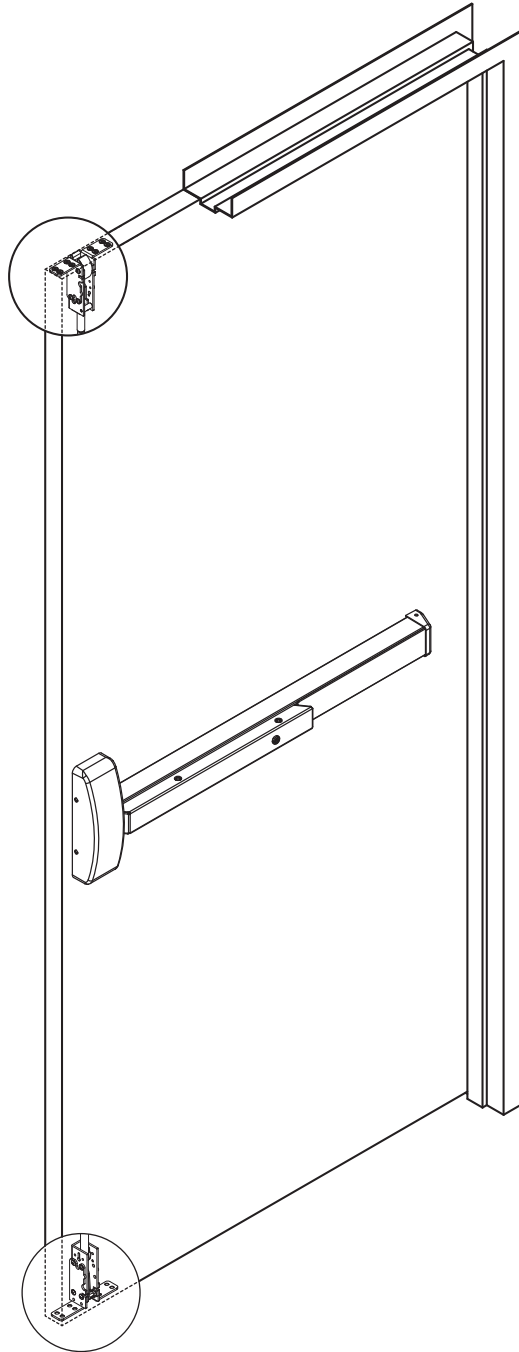

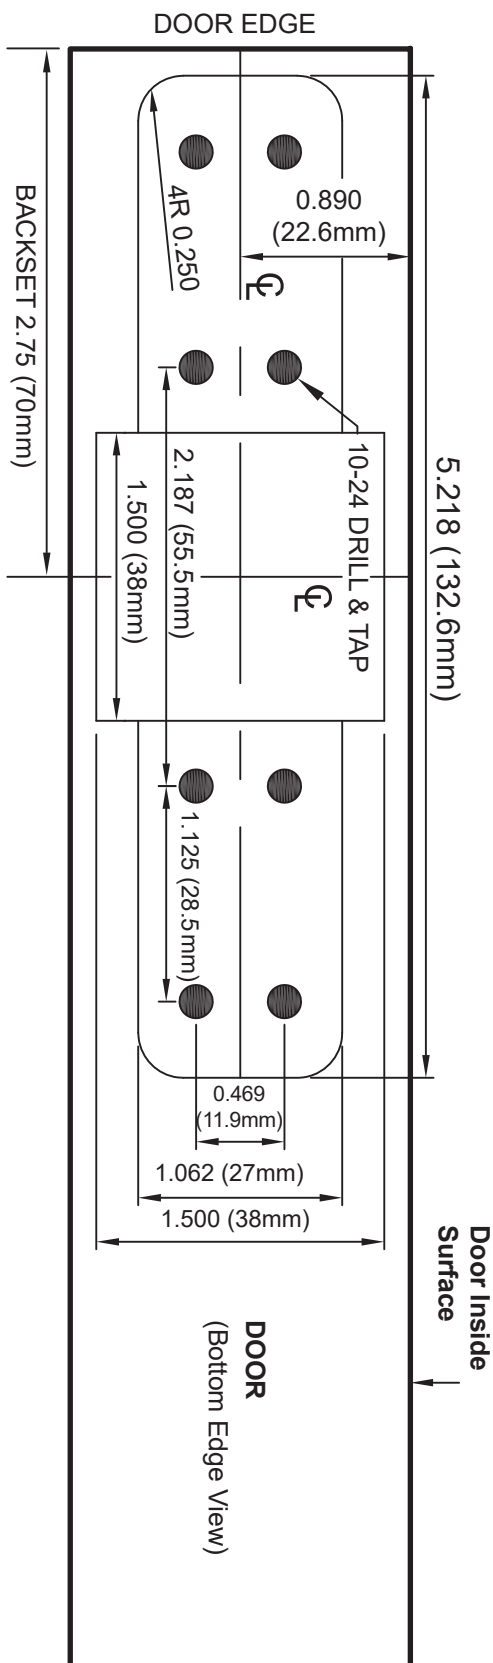


Bottom Latch Template (1:1)

DO NOT USE TEMPLATE IF NOT TO SCALE.
TO VERIFY, CONFIRM DIMENSIONS,
WE RECOMMEND SAMPLES BE USED TO
VERIFY PREPARATION BEFORE DOOR /
FRAME MANUFACTURING.




Recessed Strike Template (1:1)

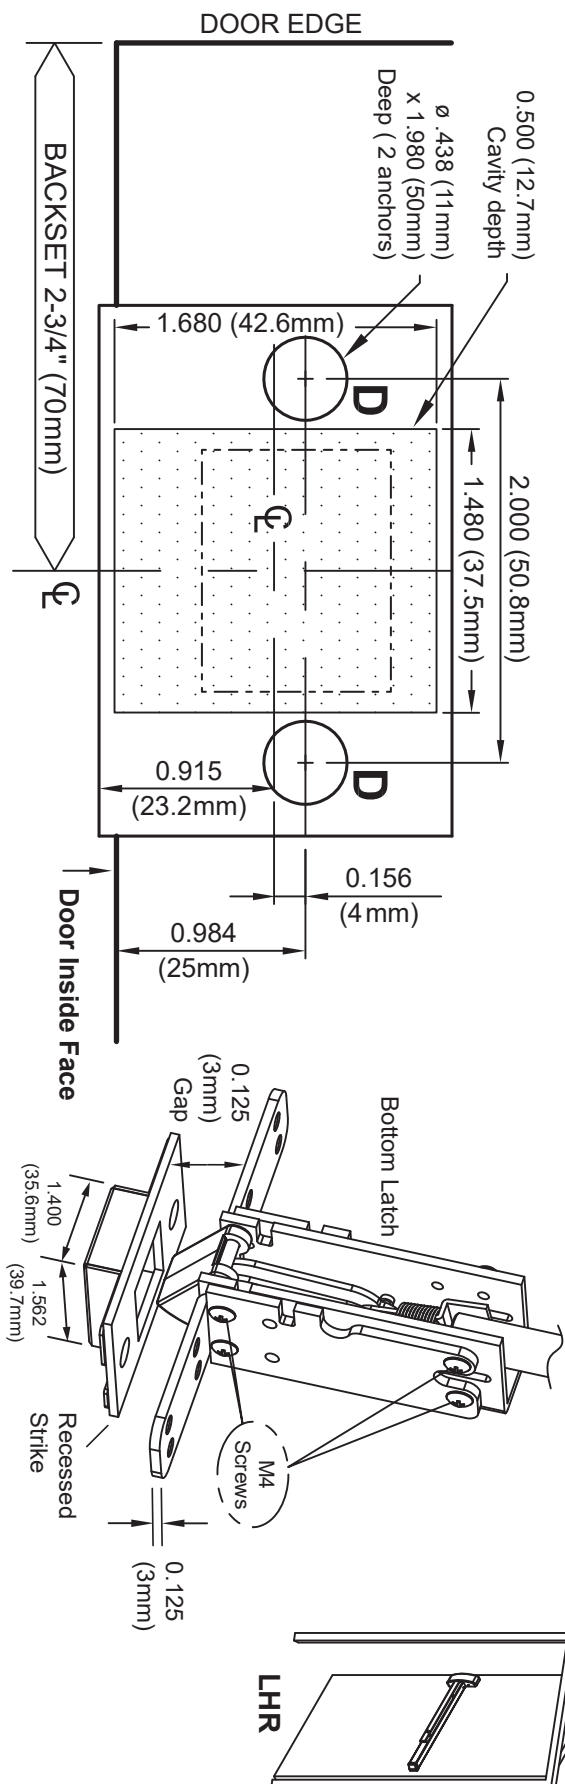


Document provided as-is, manufacturer reserves the right to make technical changes without prior notice.

Bottom Latch Template (1:1)

DO NOT USE TEMPLATE IF NOT TO SCALE.
TO VERIFY, CONFIRM DIMENSIONS,
WE RECOMMEND SAMPLES BE USED TO
VERIFY PREPARATION BEFORE DOOR /
FRAME MANUFACTURING.

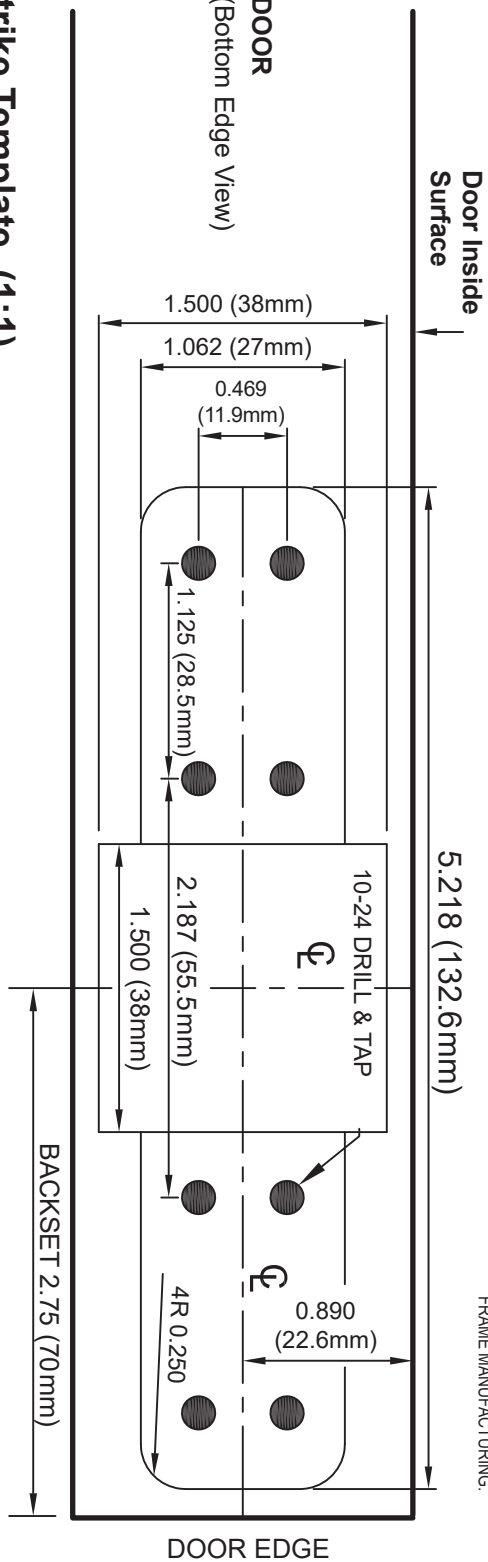


Recessed Strike Template (1:1)

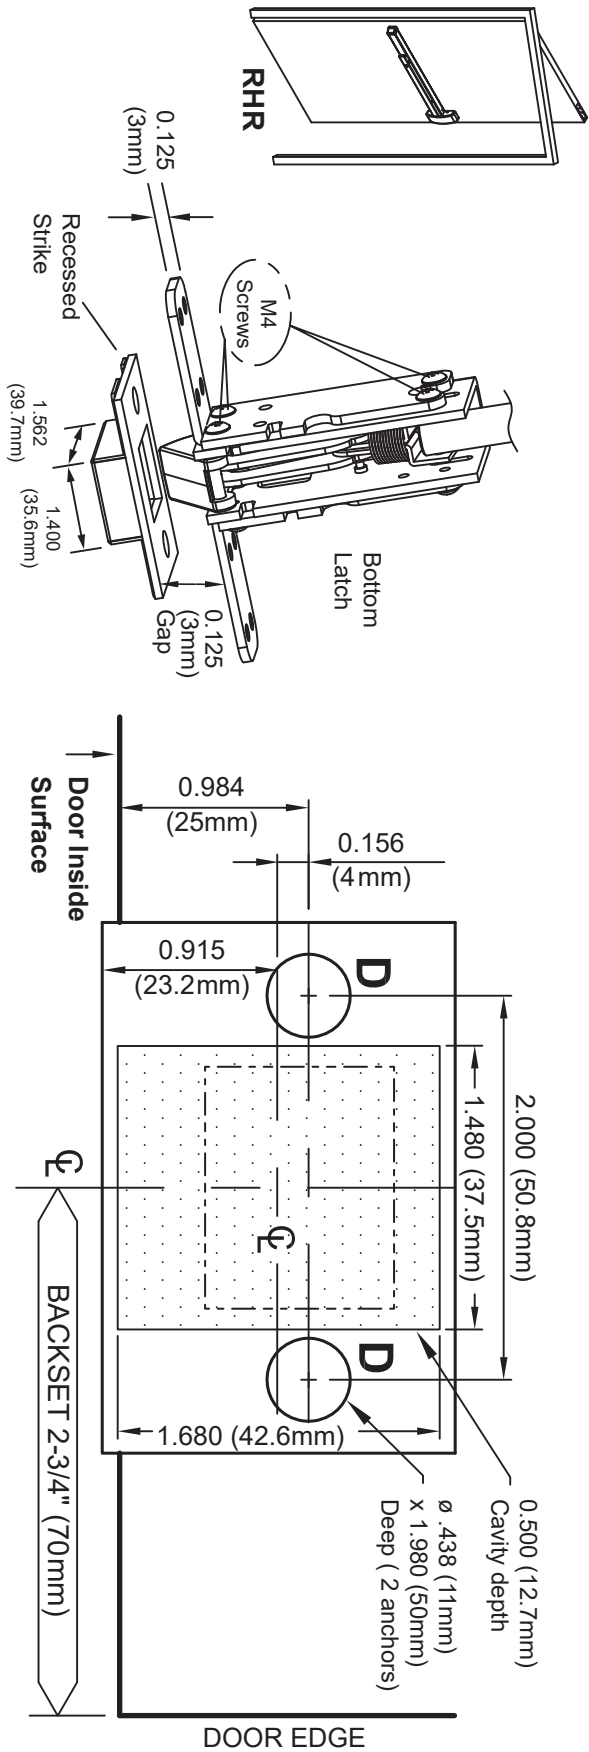



Document provided as-is, manufacturer reserves the right to make technical changes without prior notice.




! DO NOT USE TEMPLATE IF NOT TO SCALE.
TO VERIFY, CONFIRM DIMENSIONS.
WE RECOMMEND SAMPLES BE USED TO
VERIFY PREPARATION BEFORE DOOR /
FRAME MANUFACTURING.

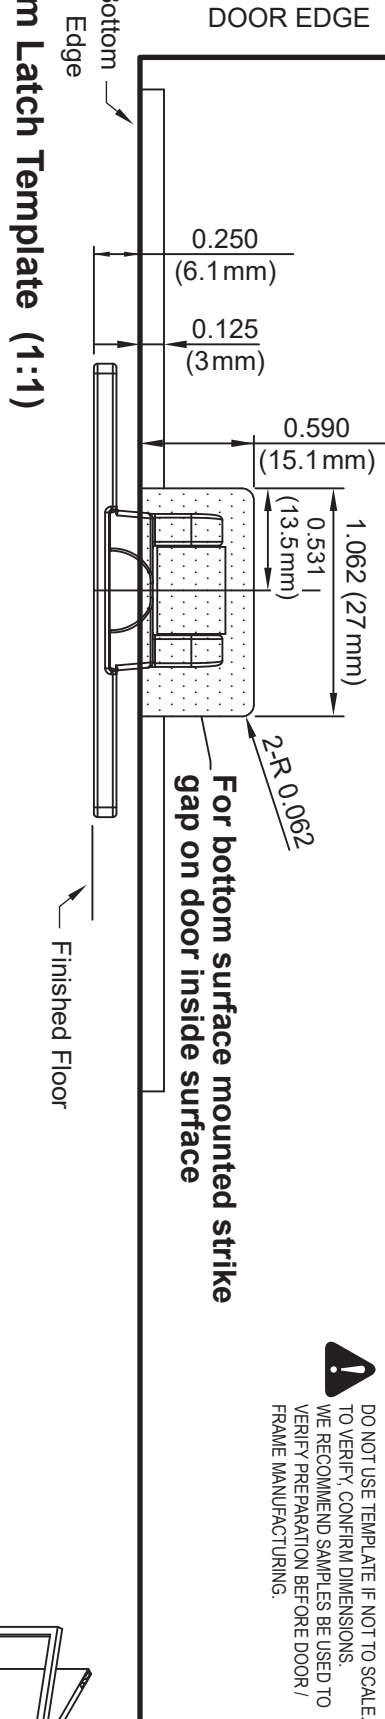

Roller Strike Template (1:1)

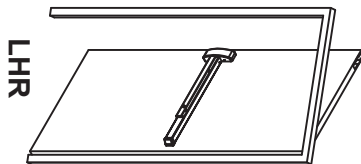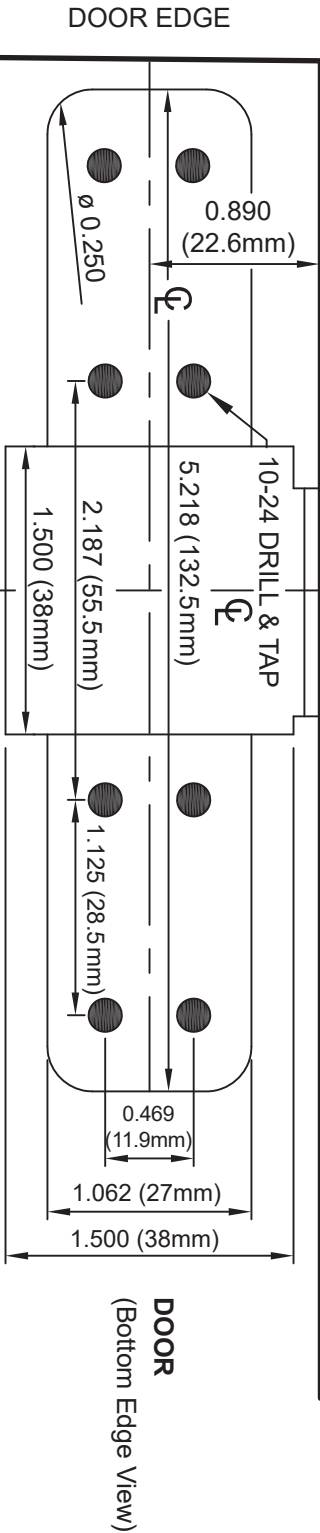

Roller Strike Template (1:1)


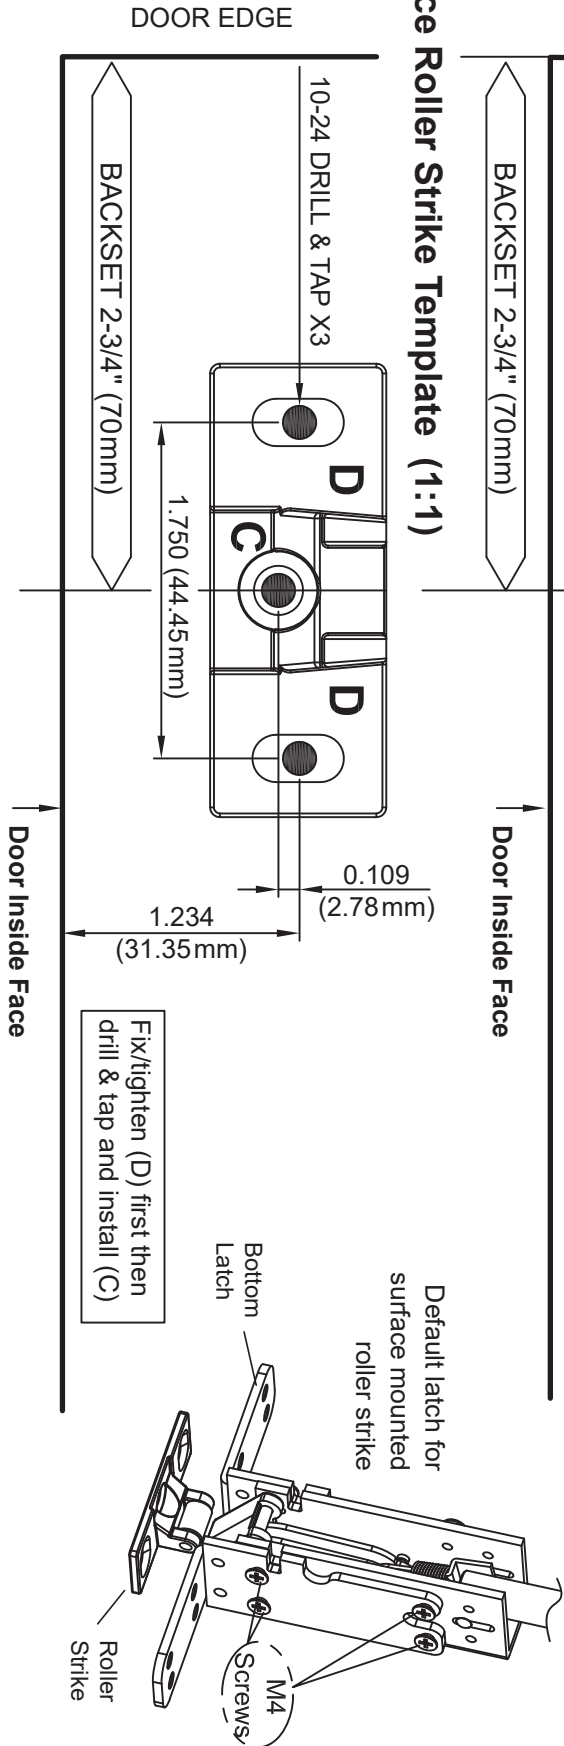


Document provided as-is, manufacturer reserves the right to make technical changes without prior notice.


! DO NOT USE TEMPLATE IF NOT TO SCALE.
TO VERIFY, CONFIRM DIMENSIONS.
WE RECOMMEND SAMPLES BE USED TO
VERIFY PREPARATION BEFORE DOOR /
FRAME MANUFACTURING.

**For bottom surface mounted strike
gap on door inside surface**

Bottom Latch Template (1:1)

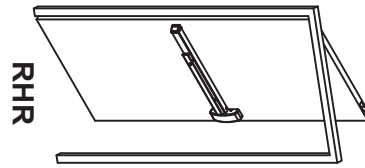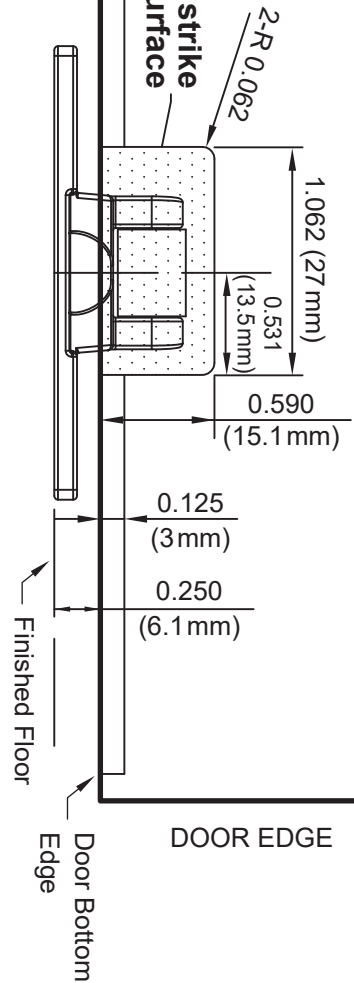


DOOR
(Bottom Edge
View)

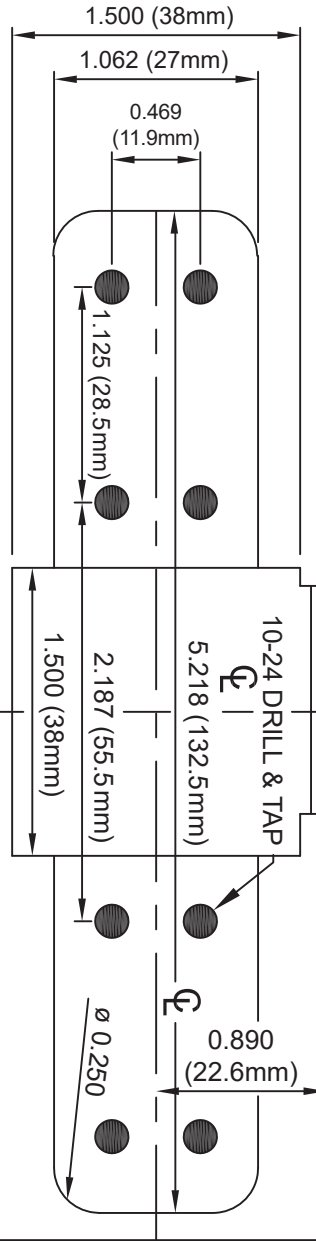


DOOR EDGE

Surface Roller Strike Template (1:1)

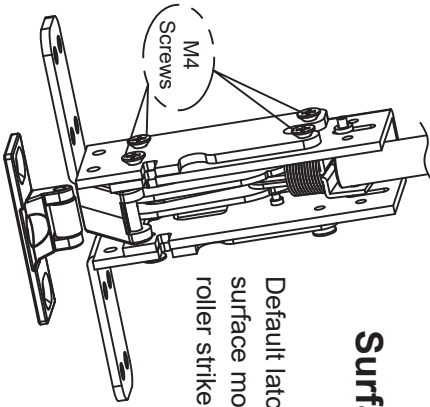

Fix/tighten (D) first then
drill & tap and install (C)

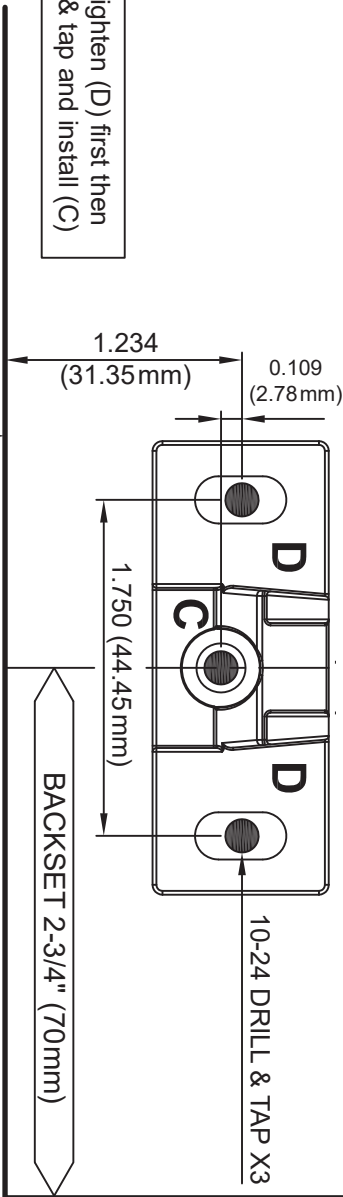

DOOR EDGE







Top Strike Template (1:1)

Fix/tighten (D) first
then fix/tighten (C)

! TOP STRIKE MUST BE RECESSED INTO THE DOOR FRAME AS SHOWN. A 1/8" (3MM) GAP MUST BE MAINTAINED BETWEEN THE TOP OF THE DOOR AND THE FRAME.

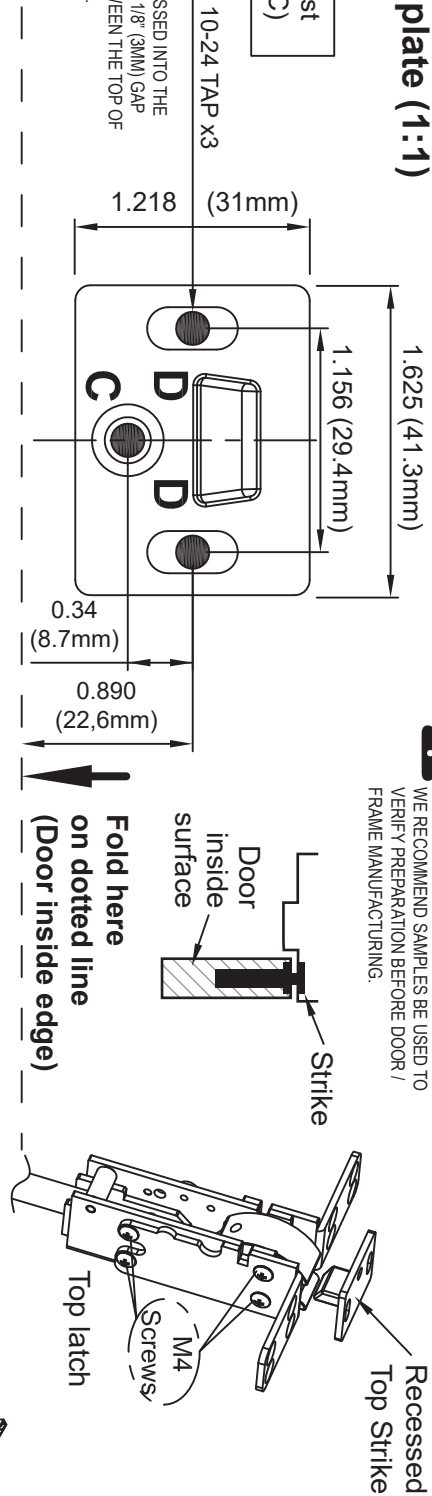


Top Latch Template (1:1)

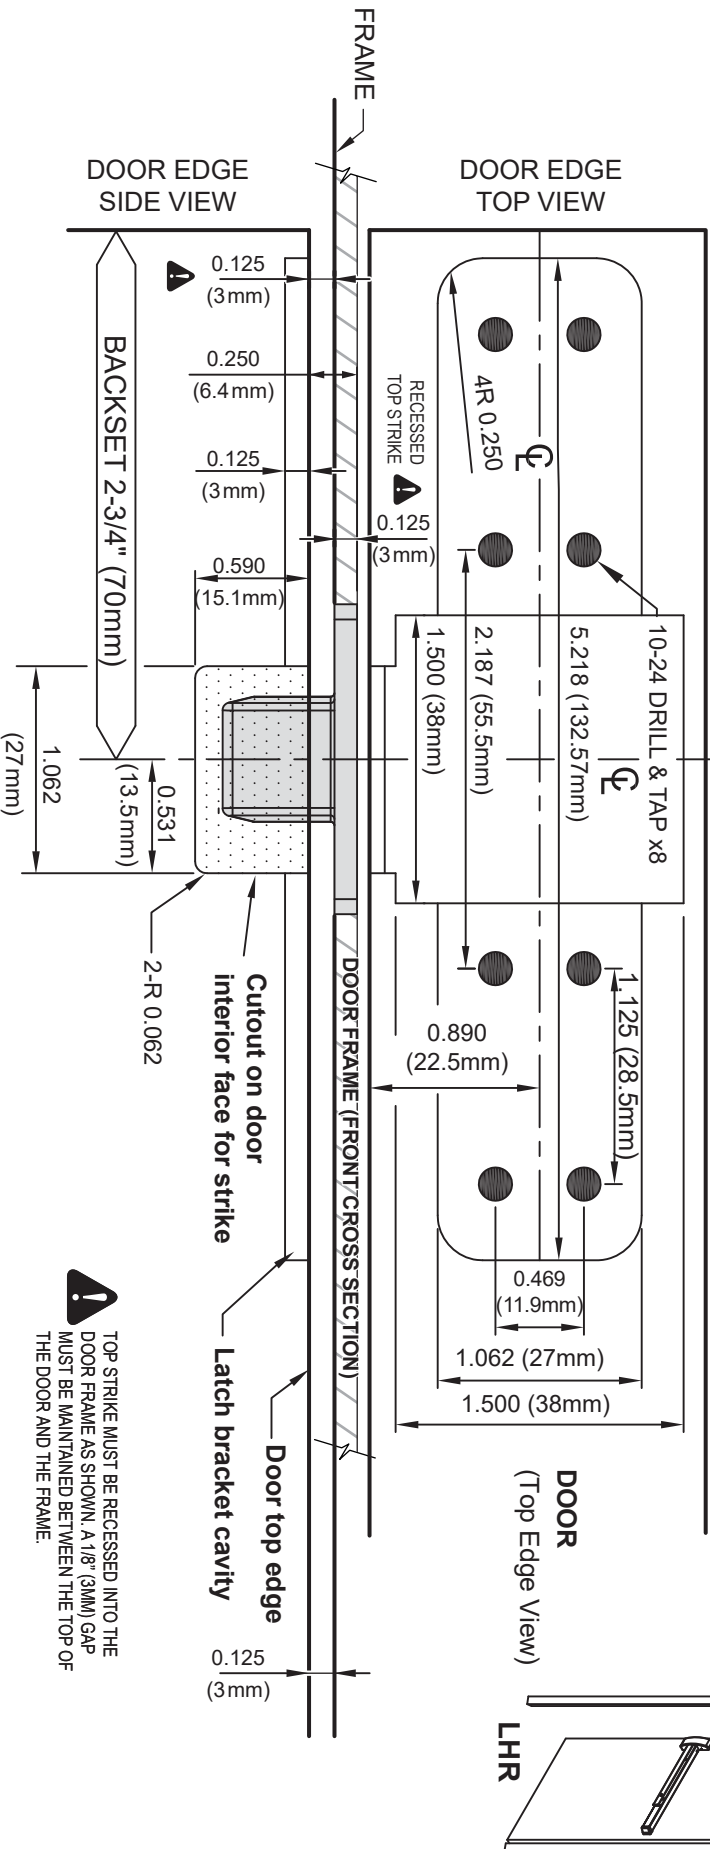


Document provided as-is, manufacturer reserves the right to make technical changes without prior notice.


Top Strike Template (1:1)

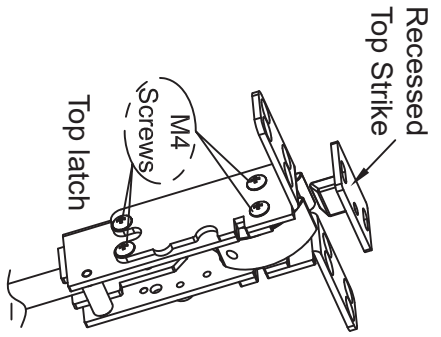


! DO NOT USE TEMPLATE IF NOT TO SCALE. TO VERIFY, CONFIRM DIMENSIONS. WE RECOMMEND SAMPLES BE USED TO VERIFY PREPARATION BEFORE DOOR / FRAME MANUFACTURING.

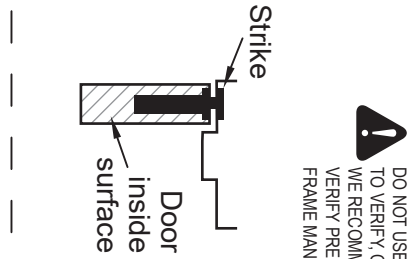

**Fold here
on dotted line
(Door inside edge)**

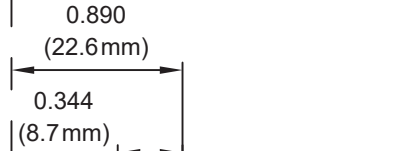



**Fix/tighten (D) first
then fix/tighten (C)**

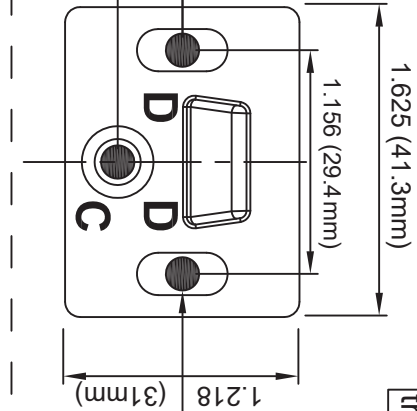

! TOP STRIKE MUST BE RECESSED INTO THE DOOR FRAME AS SHOWN. A 1/8" (3MM) GAP MUST BE MAINTAINED BETWEEN THE TOP OF THE DOOR AND THE FRAME.

10-24 DRILL & TAP x3

Top Latch Template (1:1)

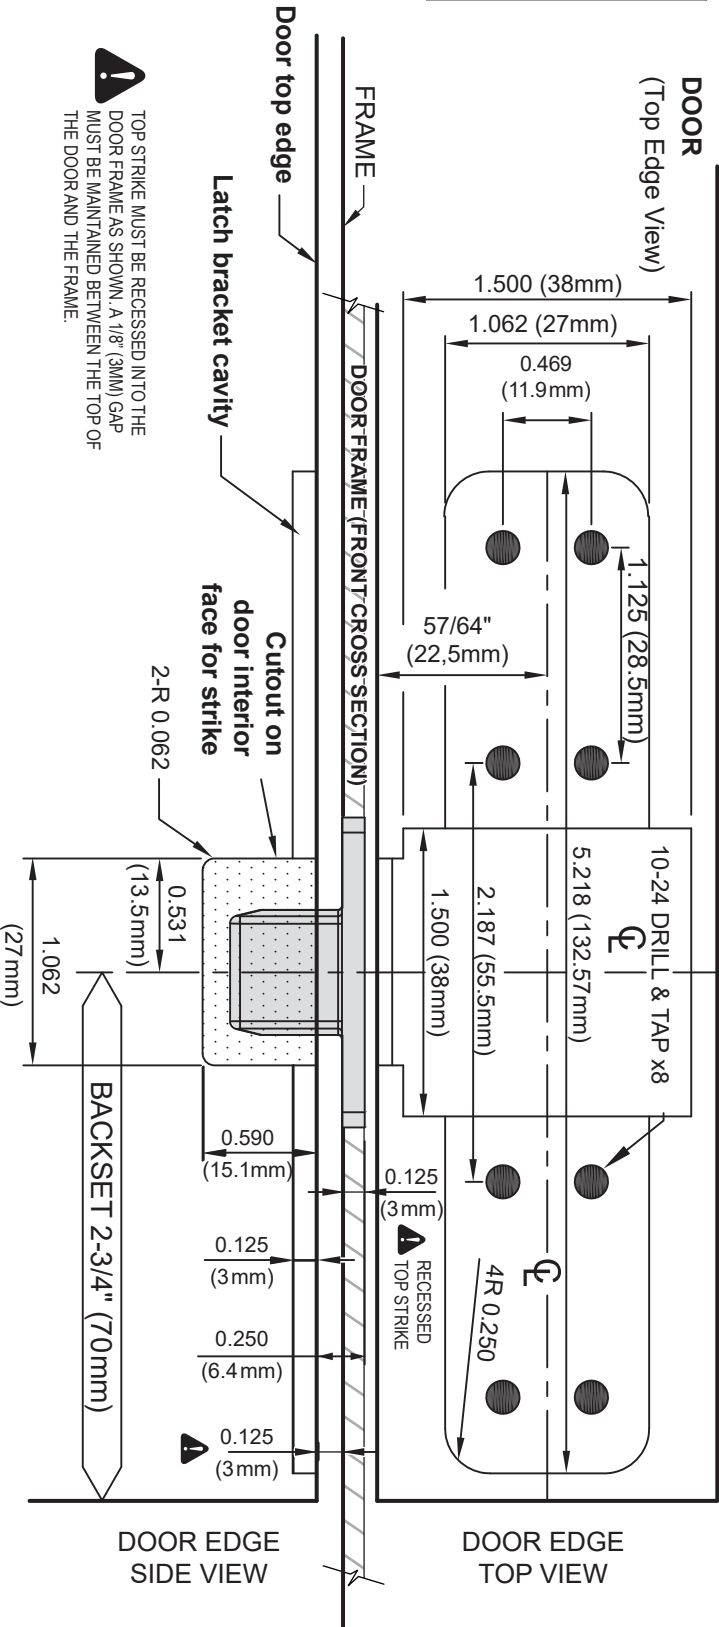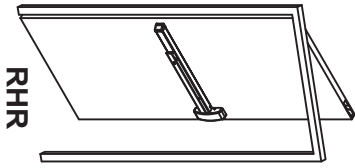

! TOP STRIKE MUST BE RECESSED INTO THE DOOR FRAME AS SHOWN. A 1/8" (3MM) GAP MUST BE MAINTAINED BETWEEN THE TOP OF THE DOOR AND THE FRAME.

DOOR EDGE
SIDE VIEW

DOOR EDGE
TOP VIEW



Document provided as-is, manufacturer reserves the right to make technical changes without prior notice.