
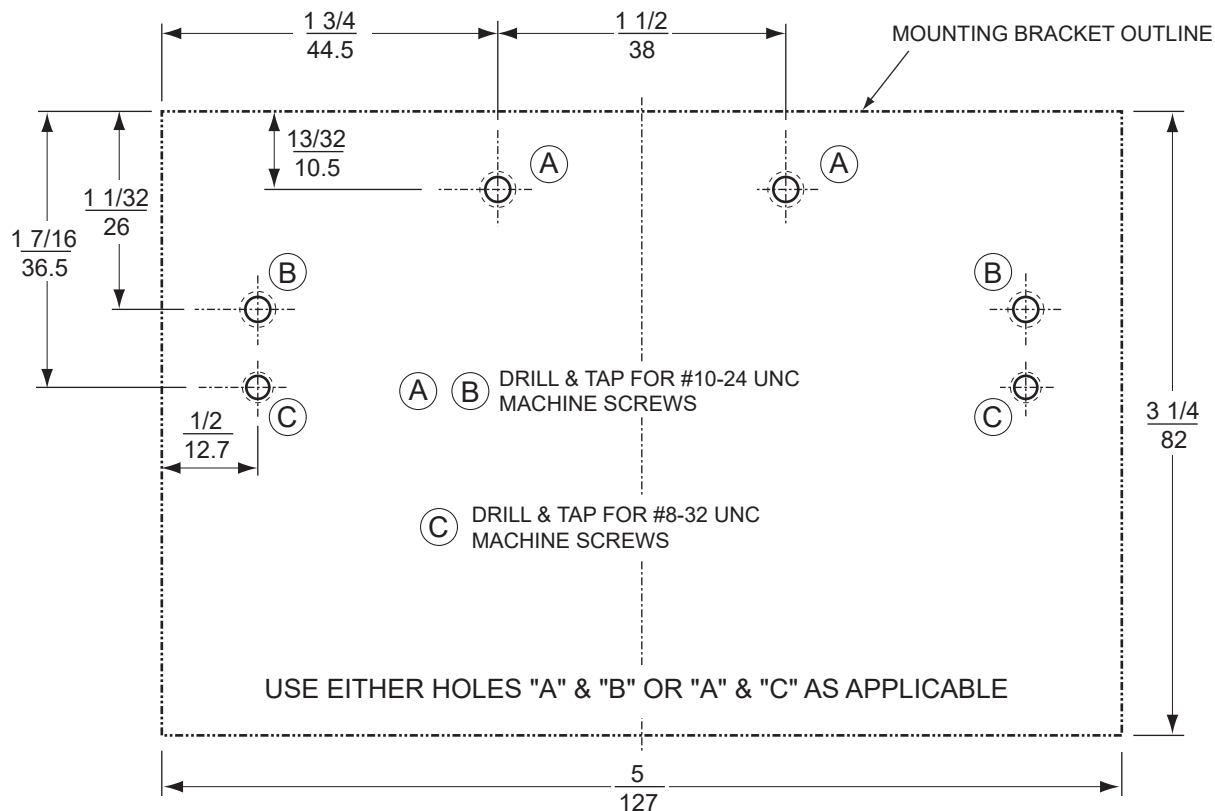
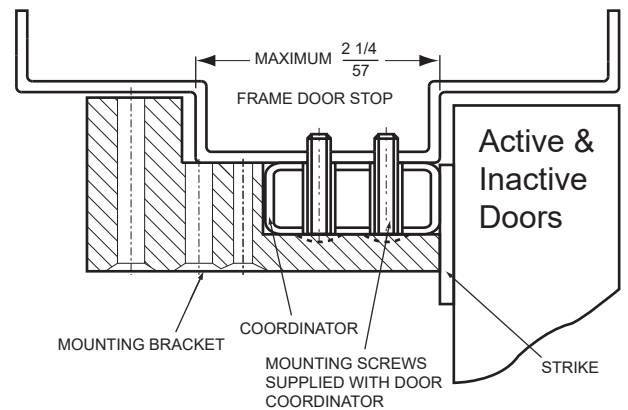


DCMB4750 MOUNTING BRACKET FOR DCSM SURFACE MOUNTED COORDINATORS

INSTALLATION INSTRUCTIONS

1. Mounting bracket for frame door stop width of 2 1/4" (57mm) or less.
2. Install first surface mounted co-ordinator as per supplied installation instructions.
3. Position bracket over co-ordinator as shown below.
4. Using the bracket as template, drill and tap into the frame door stop and attach bracket with supplied hardware.
5. For frame door stop width more than 2 1/4" (57mm), use the mounting bracket DCMB4250.



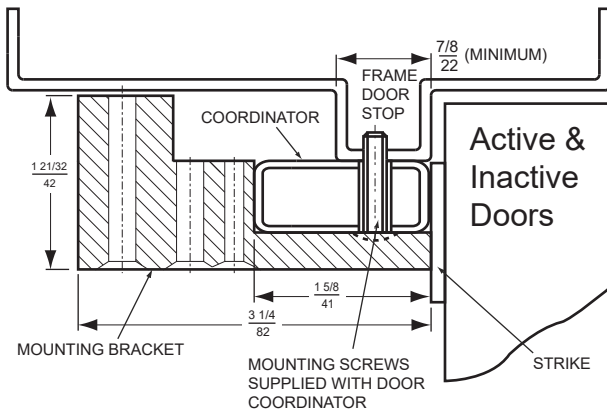


DIMENSIONS IN $\frac{\text{INCHES}}{\text{mm}}$



CAUTION: VERIFY TEMPLATE SCALE BEFORE USING

1. Support de montage avec butoir pour cadre de porte d'une largeur égale ou inférieure 2 1/4" (57mm).
2. Installez le premier coordonnateur monté en surface conformément aux instructions d'installation fournies.
3. Positionnez le support sur le coordonnateur comme indiqué ci-dessous.
4. En utilisant le support comme gabarit, percez et taraudez dans le cadre de la porte du butoir et fixez le support avec le matériel fourni.
5. Si la largeur avec le butoir pour cadre de porte est supérieure à 57 mm (2 1/4"), utilisez le support de montage de montage DCMB4250.

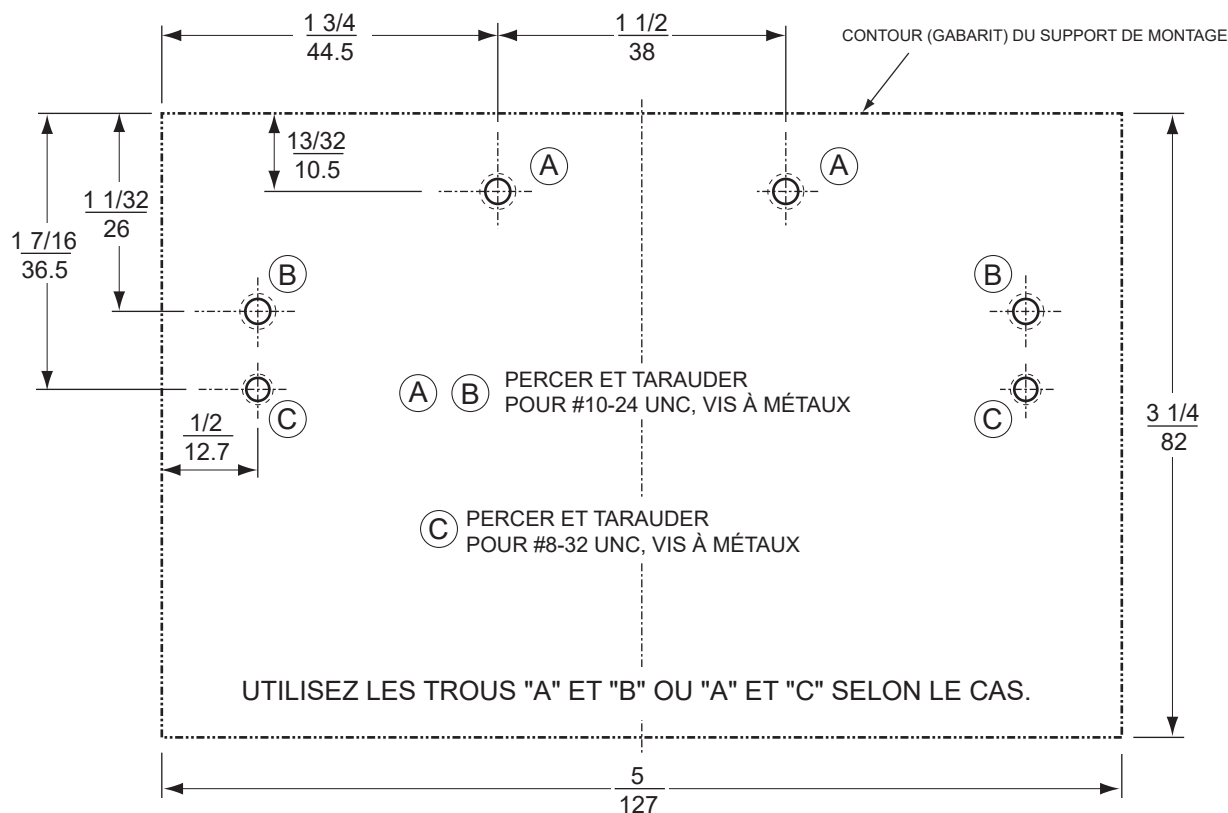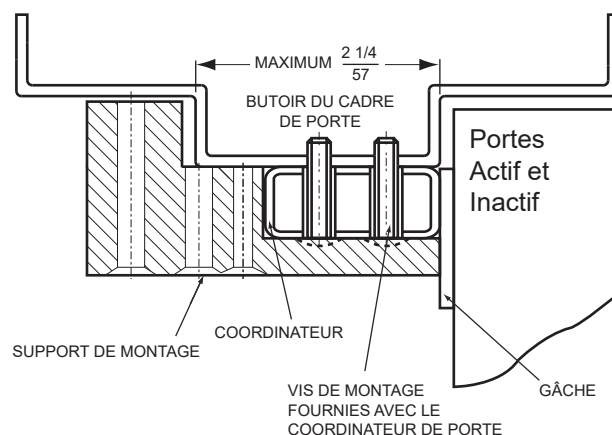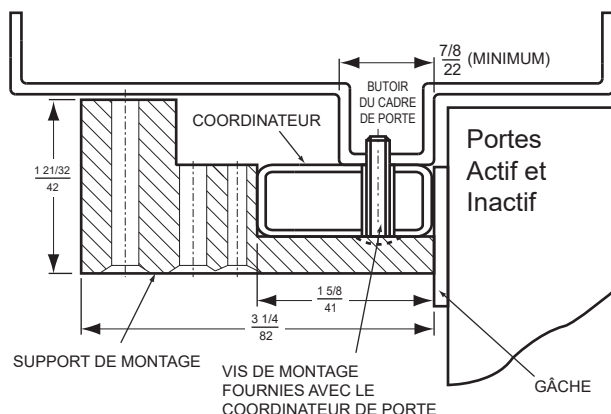

DIMENSIONS **POUCES**
mm



ATTENTION : VÉRIFIER L'ÉCHELLE DU GABARIT AVANT DE L'UTILISER