




# Weather Seal Door Accessories

## DGS-WA210N-38 Door Sweep

### DGS-WA210N-38


#### Door Sweep

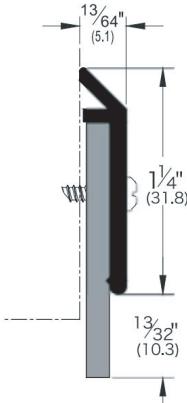

#### ITEM/FINISH:

### DGS-WA210N-38

LENGTH: 38"  
VINYL INSERT  
CLEAR ANODIZED ALUMINUM

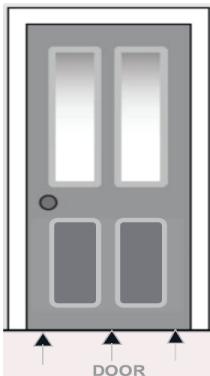

#### Packaging includes:

- Screws for wood and metal doors



7 78505 20679 0

#### Installation Guidelines:

1. Determine the required length, mark and cut the the door bottom sweep to full width of the door.
2. Close the door and place door bottom sweep along outside bottom edge of door so that it makes contact with threshold or finished floor. Mark door in center of slotted holes.
3. Drill pilot holes in door at marks.
4. Fasten door bottom sweep to door with screws.
5. Adjust to ensure firm contact with threshold / above finished floor.


#### TESTING/RATINGS:



- cULus listed (UL10C)
- Metal fire door: 3 hrs

#### Tools Required:

- |                  |                                    |
|------------------|------------------------------------|
| - Power drill    | - Screw driver                     |
| - Marker         | - Cutting tools (hacksaw & pliers) |
| - Measuring tape |                                    |

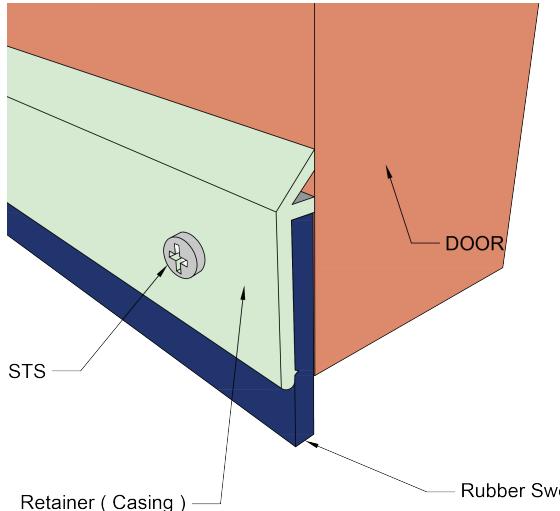


#### HINT: "Where to install door sweep?"

Door sweeps are installed on one side of a door to keep out cold drafts. It should be installed on the inside bottom edge of doors that swing into the house, and on the outside bottom edge of doors that swing outwards.

### DGS-WA210N-38

Balais de porte

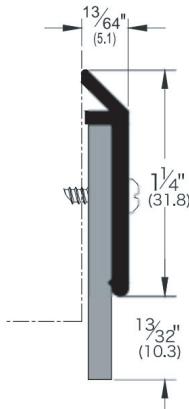


MODÈLE/FINITION :

### DGS-WA210N-38

LONGUEUR : 38"

INSERT EN VINYLE

ALUMINIUM ANODISÉ CLAIR

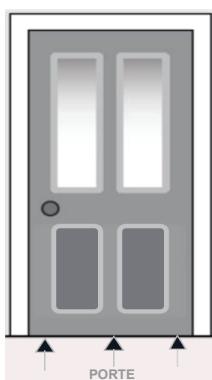

L'emballage comprend:

-Vis pour portes en bois et en métal

### Guide d'installation :

1. Déterminez la longueur nécessaire, marquez et coupez le bas de porte à la largeur totale de la porte.
2. Fermez la porte et placez le bas de porte le long du bord inférieur extérieur de la porte de manière à ce qu'il soit en contact avec le seuil ou le plancher fini. Marquer la porte au centre des trous oblongs.
3. Percez des avant-trous dans la porte au niveau des marques.
4. Fixer le bas de porte à la porte à l'aide de vis.
5. Ajuster pour assurer un contact ferme avec le seuil / au-dessus du sol fini.


### Outils nécessaires :

- |                      |                          |
|----------------------|--------------------------|
| -Perceuse électrique | -Tournevis               |
| -Marqueur            | -Outils de coupe         |
| -Ruban à mesurer     | (scie à métaux et pince) |

### TESTS / ÉVALUATIONS :



- Homologué cULus (UL10C)
- Porte coupe-feu en métal : 3 hrs

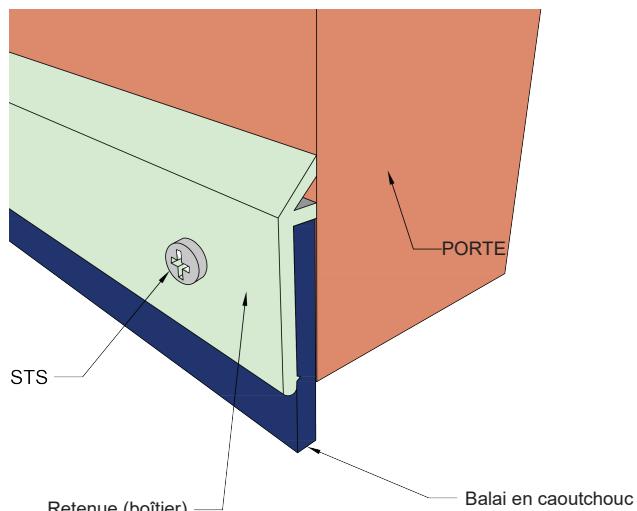

### Indice : « Où installer le balai de porte ? »

Les balais de porte sont installés d'un côté de la porte pour empêcher les courants d'air froid. Il doit être installé sur le bord inférieur intérieur des portes qui s'ouvrent vers l'intérieur de la maison et sur le bord inférieur extérieur des portes qui s'ouvrent vers l'extérieur.



7 78505 20679 0